


STRAIGHT AIR SCREWDRIVER

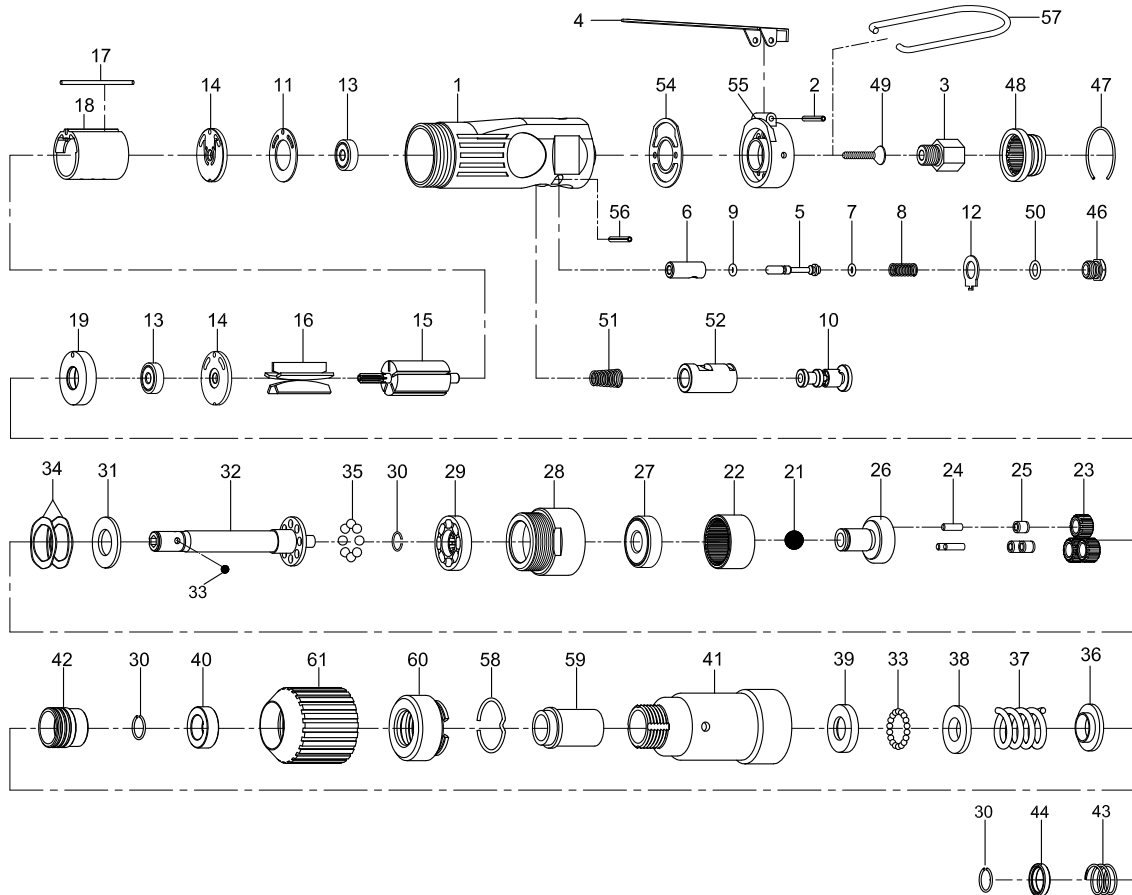

Index No.	Parts No.	Description	Index No.	Parts No.	Description
1	84201	Housing	31	88331	Thrust Washer
2	30102	Spring Pin (3x24L)	32	88332	Cam Spinidle
3	51203	Air Inlet	33	40145	Steel Ball (17) (1/8")
4	84204	Throttle Lever	34	88334	Wave Washer (2) (WW-14)
5	84205	Valve Stem	35	88335	Steel Ball (8) (5mm)
6	84206	Valve	36	88336	Washer
7	OR00305200	O-Ring (3.5x2.0)	37	88337	Spring
8	30108	Spring	38	88338	Washer
9	84209	O-Ring (2x1.5)	39	88339	Ball Guide
10	84210	Reverse Lever	40	88340	Spacer
11	80211	Motor Gasket	41	88341	Clutch Housing
12	84212	Reverse Retainer	42	80242	Ball Retainer
13	030113	Ball Bearing (2) (626zz)	43	80243	Spring
14	80214	End Plate (2)	44	80244	Washer
15	80215	Rotor	46	84246	Throttle Valve Plug
16	80216	Rotor Blade (5)	47	51229	Retaining Ring
17	80217-13	Pin (2.5x55L)	48	51206	Exhaust Diffuser
18	80218-22	Cylinder	49	84249	Screw (2) (M3x15L)
19	80219	Spacer	50	40134-12	O-Ring (7.8x1.9)
21	88321	Steel Ball (7mm)	51	84251	Spring
22	80222	Internal Gear	52	84252	Reverse Bushing
23	80223	Planet Gear (3)	54	84254	Rear Gasket
24	30124	Pin (3) (4x13.8L)	55	84255	Rear Cover
25	80225	Bushing (3)	56	40337	Spring Pin (3x18L)
26	88226	Work Spindle	57	84257	Hook
27	080227	Ball Bearing (6201z)	58	88352	Retainer
28	80228	Clamp Nut	59	88353	Bushing
29	88329	Drive Dog	60	88354	Adjustable Screw
30	80230	Retaining Ring (3)	61	88355	Adjustable Knob